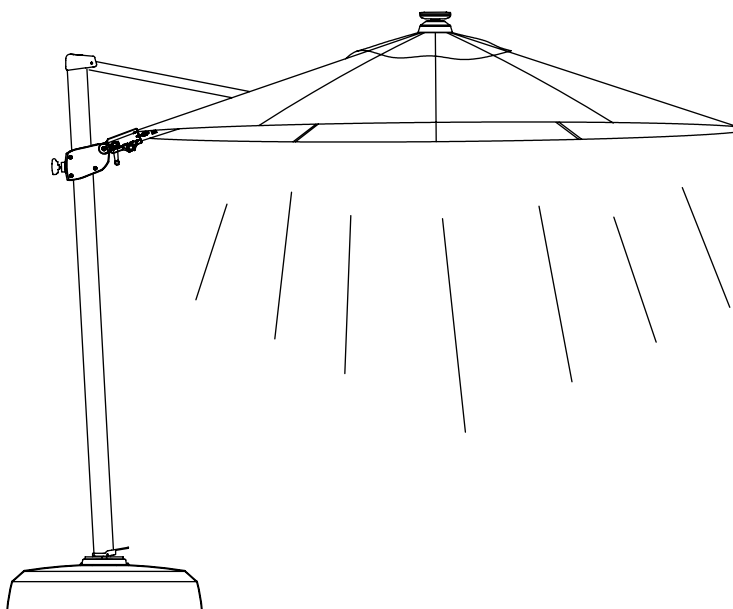 


KETTLER

3.5 m Premium Free Arm Parasol


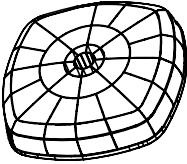 
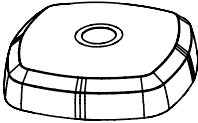 
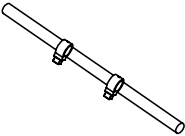 



 
PL35


 
 
 

 
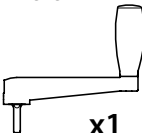 






IMPORTANT

PLEASE KEEP THIS BOOKLET FOR FUTURE REFERENCE.
THIS IS IMPORTANT INFORMATION REGARDING THE USE AND
CARE OF YOUR GARDEN FURNITURE.

Parts List



| | | | |
|--|--|---|--|
| <p>(J) Inverted Base Stem</p>  <p>x1</p> | <p>(K) Base Shell</p>  <p>x1</p> | <p>(L) Base Lid</p>  <p>x1</p> | <p>(M) Inverted Base Stem</p>  <p>x1</p> |
| <p>(E) Bolt with Nut M8x22</p>  <p>x4</p> | <p>(H) Plate Bolts M8x23</p>  <p>x4</p> | <p>(N) Wrench</p>  <p>x1</p> | <p>(O) Inverted Plate</p>  <p>x1</p> |
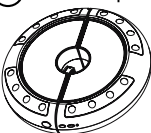 
| | | | |
|--|---|---|---|
| <p>(A) Parasol</p>  <p>x1</p> | <p>(B) Solar Panel</p>  <p>x1</p> | <p>(C) Protective Cover</p>  <p>x1</p> | |
| <p>(D) Base Lever</p>  <p>x1</p> | <p>(G) Wrench</p>  <p>x1</p> | <p>(I) Wrench</p>  <p>x1</p> | <p>(F) Adjusting Lever</p>  <p>x1</p> |
| <p>(P) Parasol Cap</p>  <p>x1</p> | <p>(Q) USB Cable</p>  <p>x1</p> | <p>(R) Wireless Speaker</p>  <p>x1</p> | <p></p> <p>Do not discard any of the packaging until you have checked that you have all the parts and the pack of fixings.</p> |

Helpful advice before you begin:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
3. Assemble this product on a soft surface.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
5. Keep fittings out of children's reach.
6. Do not use any other tools other than those recommended to build this product.
7. Please do not use substitute parts. Use only additional or replacement parts supplied by Kettler.
8. In the unlikely event that this product has missing or damaged parts, please visit our website www.kettler.co.uk

  Assembly

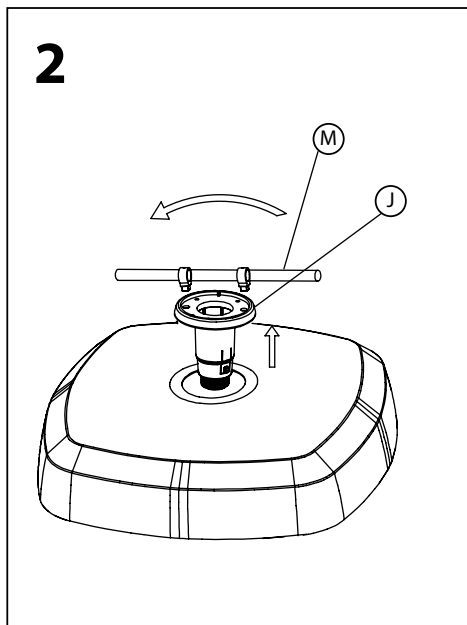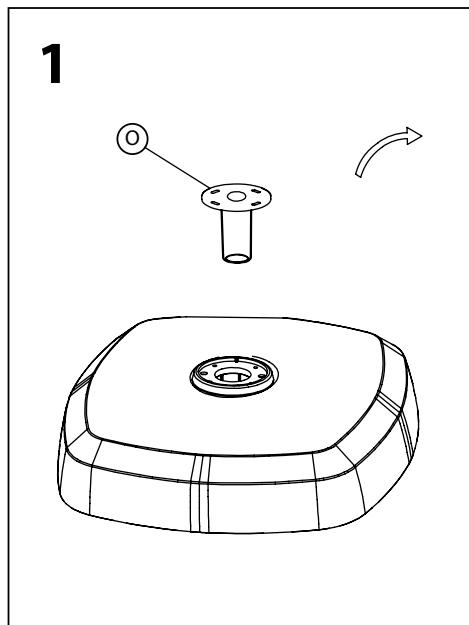


Assembly

 
3

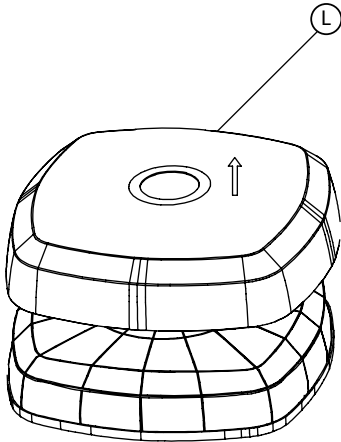


4

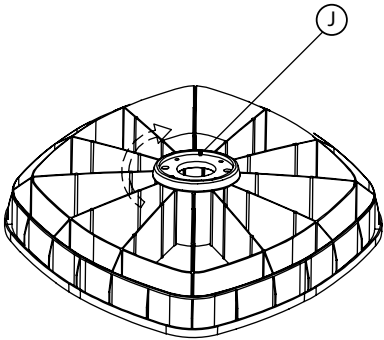 

5

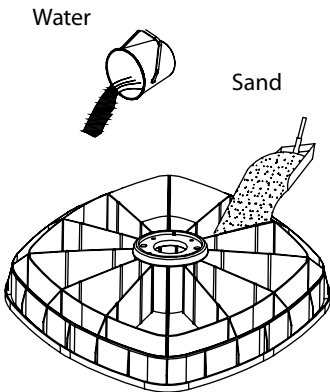 


6

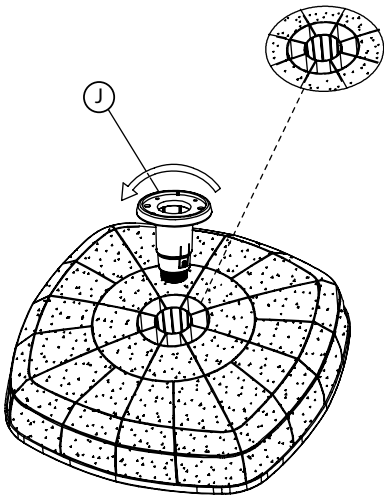 


Assembly

 
7

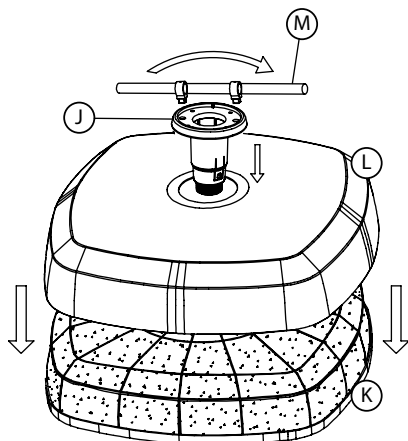


8

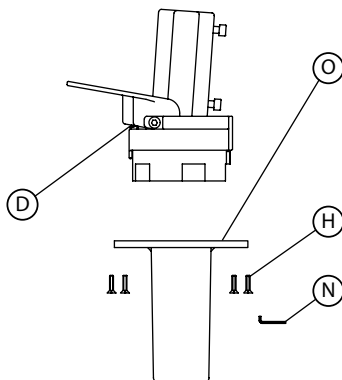 

9

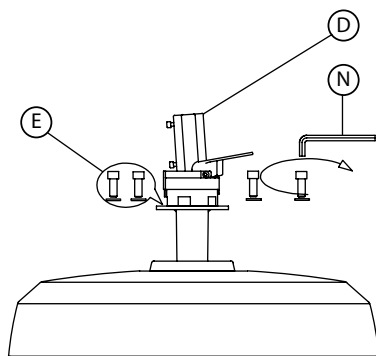 


10

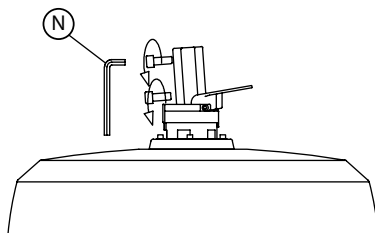 


Assembly

 11

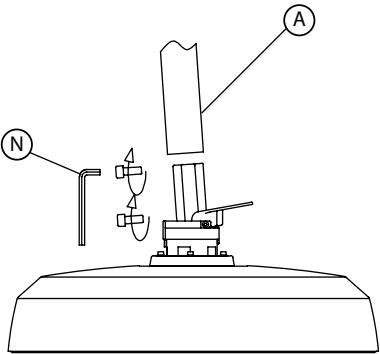


12

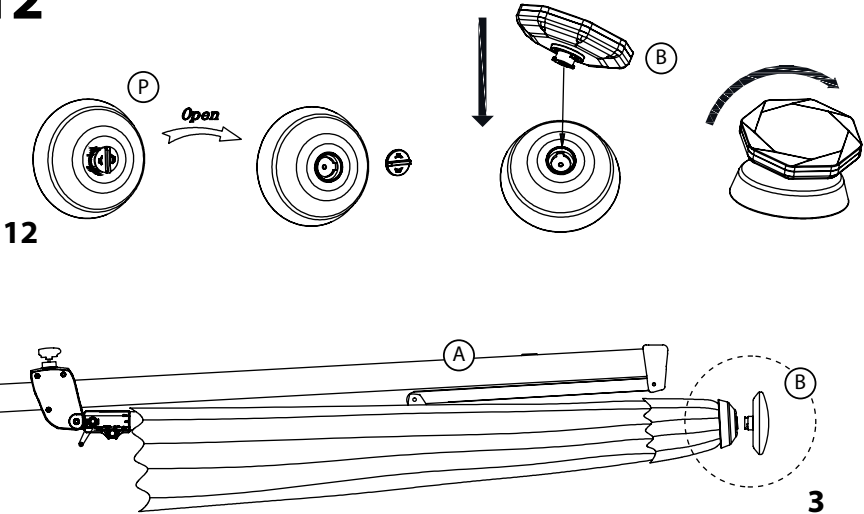 


Assembly

 13

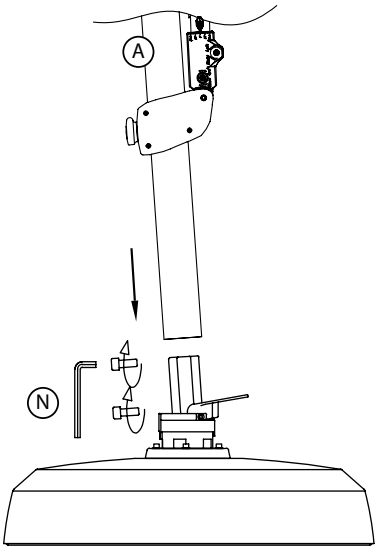


14

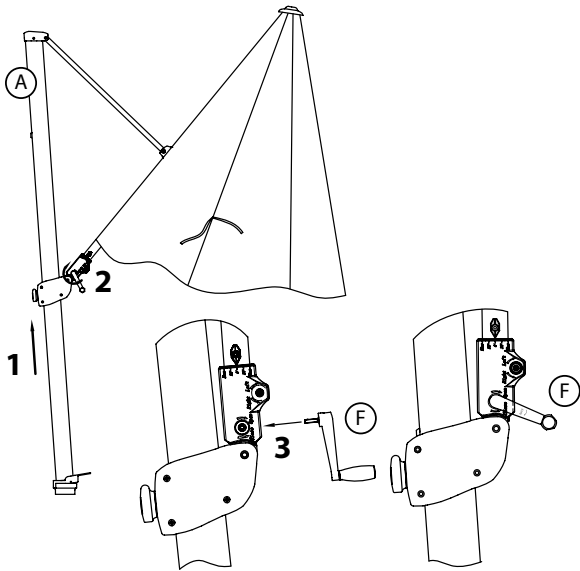 


Operating Instructions

 1

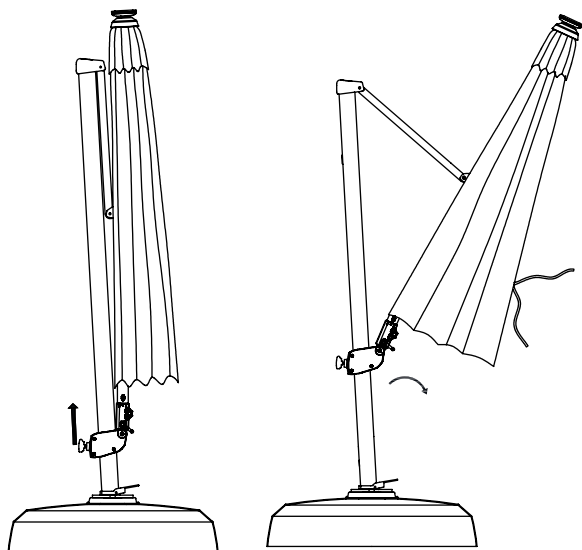


2

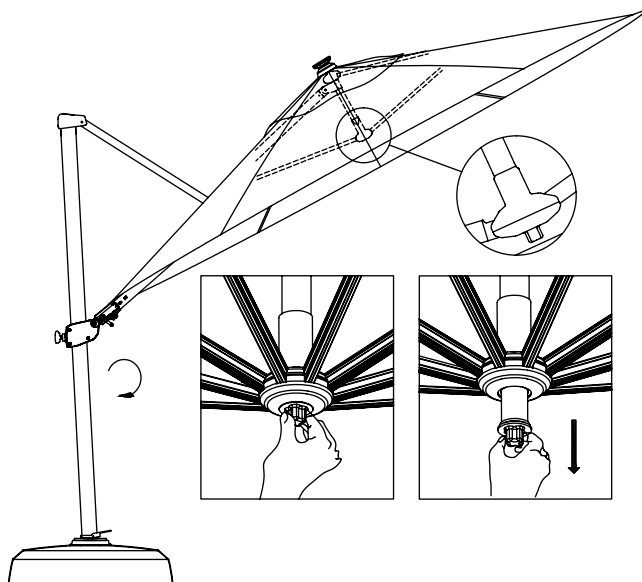 


Operating Instructions


 
3

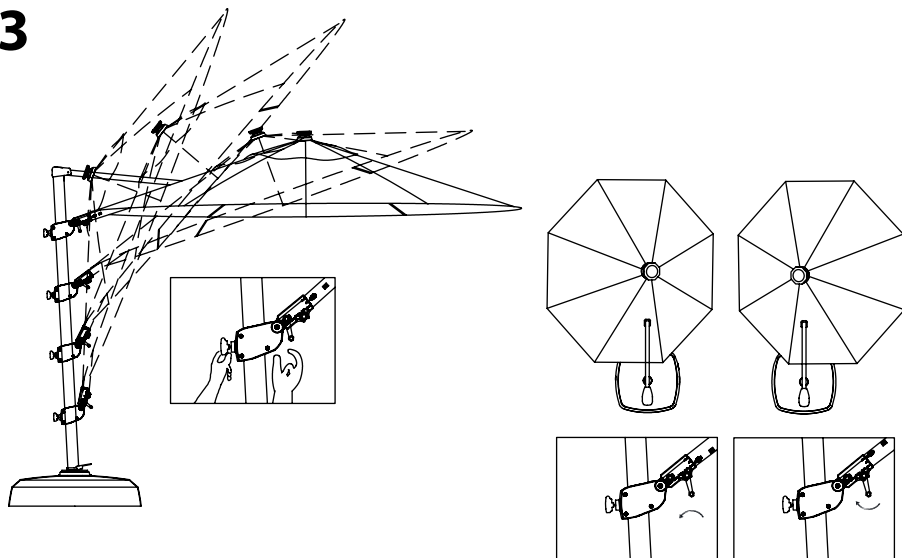



4

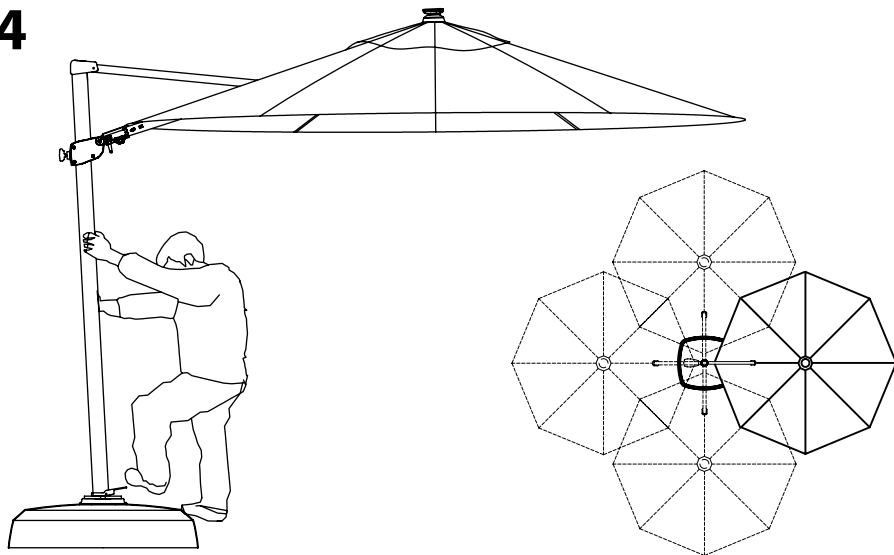 

Operating Instructions



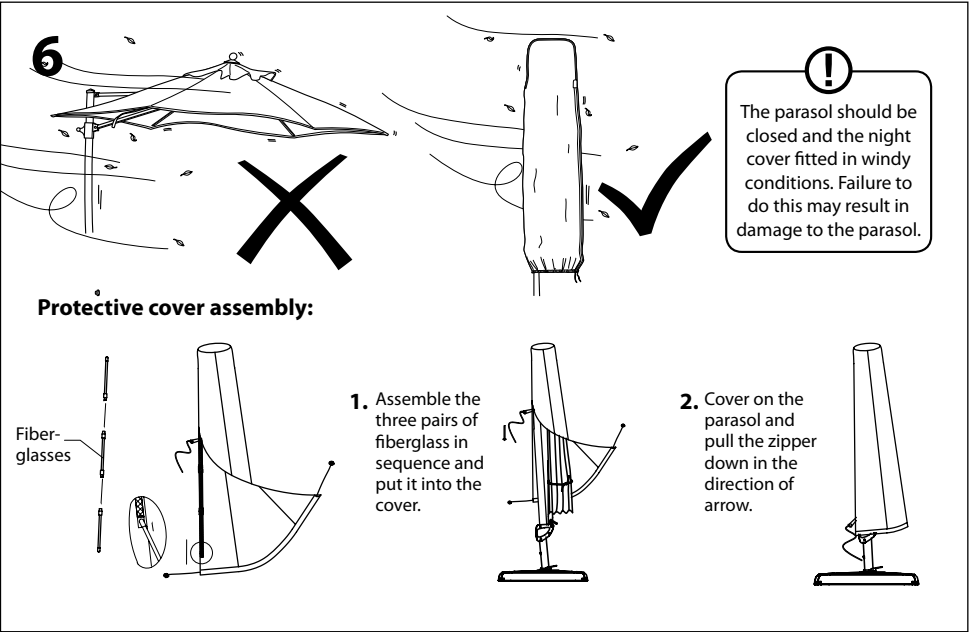 
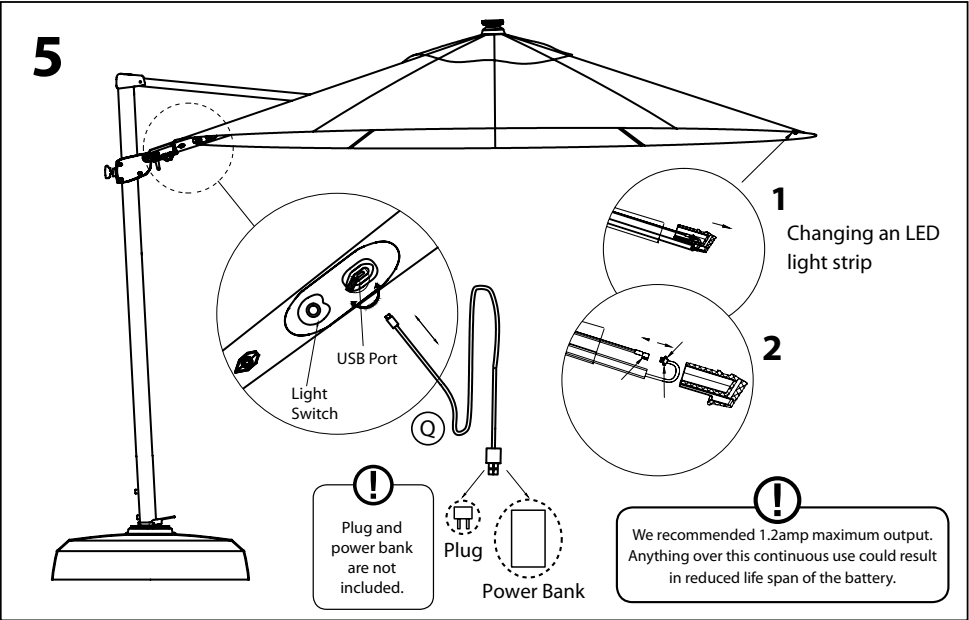 


Parasol Wireless Speaker with LED Light

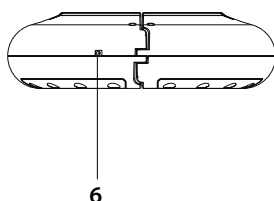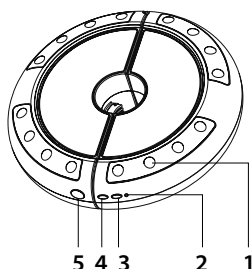  

Functions

    1. LED Light
2. Wireless & Charging Indicator
3. Wireless Switch
4. LED Light Power Switch
5. Unlock Button
6. Charging Port

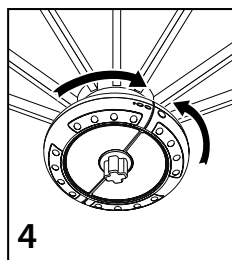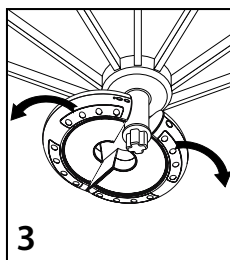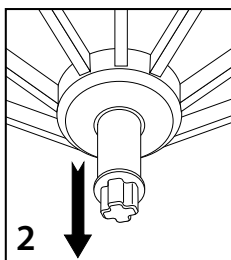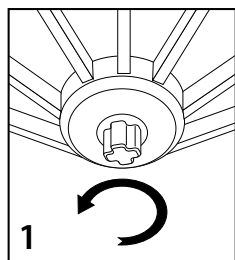

Pull down middle section and attach the Wireless speaker here.

Charging:

- Charge for 2-4 hours for the 1st charge.
- Plug the adapter in the charging port and plug into the power supply (100-240V).
- We recommended 1.2amp maximum output. Anything over this continuous use could result in reduced life span of the battery.
- When charging the red light will light up and go off when fully charged.
- Always charge in a dry environment.

User guide:

- To turn on, hold down the wireless switch for 3 seconds.
- Turn on your device's Wireless function and search for "Luna".
- The run time is approx. 6-10 hours.
- To turn the light on/off press the "LIGHT" button.

Warning:

- Wireless connectivity will turn off when not used for 15 minutes.
- The sound quality will not be as good quality when the battery is low.
- Use wirelessly for upto 8-10metre range. Any more than this will affect the sound quality.
- Only one device can be connected at any one time.
- Do not allow the speaker unit to get wet.
- Store in a dry place when not in use.

Light:

- The LED lights ideally need to be charged in sunlight. It can be charged in daylight but will take longer to charge.



For Your Safety

- This product may only be used for its intended purpose as furniture for residential properties.
- Check all components regularly for correct function, damage and loose connections especially at the start of the season and at 1-2 month intervals dependent on use.
- Damaged components may endanger your safety or shorten the life of the product. Replace all damaged parts immediately. Use only spare parts manufactured by Kettler. Should you wish to purchase spare parts, they can be ordered directly from: **www.kettler.co.uk/shop**
- Kettler will not be responsible for damaged caused by improper use.



Attention

- Whilst assembling this product keep out of the reach of children. (Choking hazard – contains small parts)
- Ensure that your working area is free of possible sources of danger, for example don't leave any tools lying around.
- Always dispose of packaging material in such a way that it may not cause any danger. There is always a risk of suffocation if children play with plastic bags!
- We reserve the right to make changes for technical reasons.

KETTLER

Kettler GB Limited,
Merse Road, North Moons Moat,
Redditch, Worcestershire,
B98 9HL



www.kettler.co.uk



Warranty For Home Use

KETTLER parasols are covered by a
12 MONTH WARRANTY.

The warranty applies to domestic use only. If the product is damaged or chipped, rust may occur, and will not be covered by this warranty. If a product is accidentally damaged you can obtain touch up paint from our website **www.kettler.co.uk**

To validate your warranty, register at **www.kettler.co.uk** and quote the product code from the front of this booklet.