



Tent Pitching Instructions Soul

Inner First Pitching

1. Assemble poles and lay them parallel on the ground (2 poles – 1 long, 1 short).
2. Open out inner and position in required direction.
3. Insert the poles through the pole sleeves on the outside of the inner.
4. Locate one end of each pole on one side of inner into the metal pin system at the end of the pole sleeves. Push poles into an arch from opposite ends and locate pole ends into corresponding metal pin.
5. Peg the rear point of the inner tent.
6. Carefully extend the tent forwards, then peg the two front corners.
7. Peg both of the poles through the ring of the ring and pin system (see figure 2).

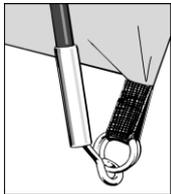


Figure 1

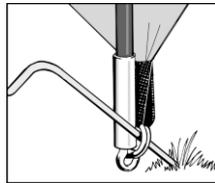


Figure 2

Flysheet

1. Open out flysheet and position so that the inner doorway and the flysheet doorway correspond.
2. A number of velcro strips are located on the underside of the flysheet. These must be secured around the poles of the inner tent.
3. Peg down each side of flysheet through the shock-cord pegging points, adjacent to the metal rings of the inner tent.
4. Pull porch taut, away from main body of tent and peg down the corners of the porch through the shock-cord pegging points using pin-pegs.
5. Peg out the rear point of the flysheet.
6. Peg out ALL guy lines using pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.