















ASSEMBLY INSTRUCTION

GENTS WARDROBE


| No | Hardware | Qty |
|----|--|-------|
| 1 | Hinge  | 06 |
| 2 | Wood dowel Ø8x30  | 01 |
| 3 | Wood dowel Ø8x40  | 04 |
| 4 | Bolt M6x35  | 04 |
| 5 | Flat Washer M6  | 04 |
| 6 | Allen key (K4)  | 01 |
| 7 | Screw Ø4x35  | 12 |
| 8 | Screw Ø4x45  | 14 |
| 9 | Handle with bolt  | 2 set |
| 10 | Bracket  | 02 |
| 11 | Tie  | 01 |
| 12 | Screw Ø4x20  | 06 |

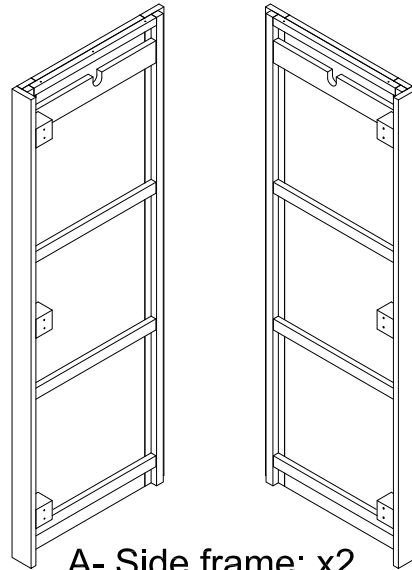



A- Side frame: x2
(Left-Right)

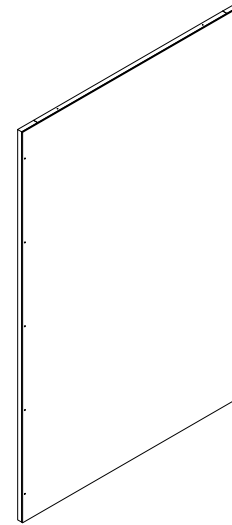


B- Back frame x 1

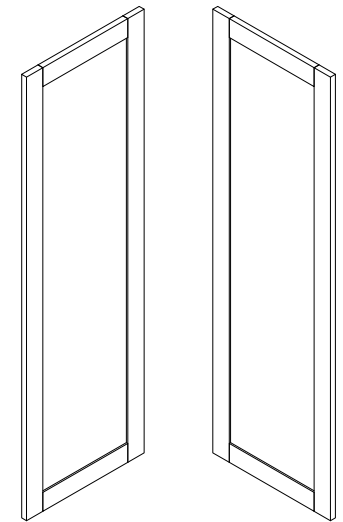


C- Door x 2

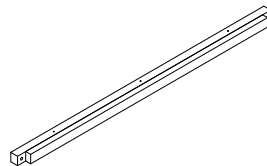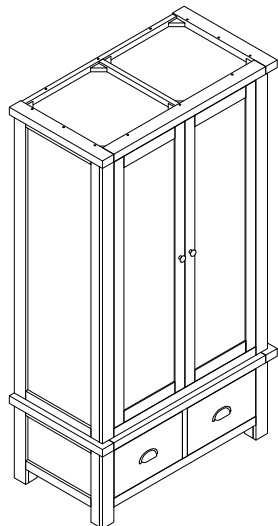


D- Top front rail x 1

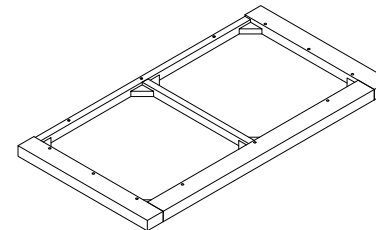


F- Top frame x1

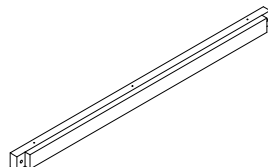


E- Bottom front rail x1

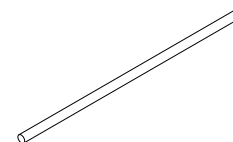

G- Hanging rail x 1

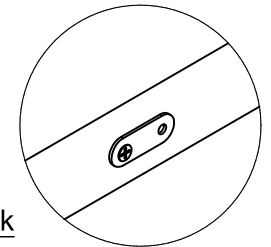


See from back
Fix Connecting
Bracket from Back

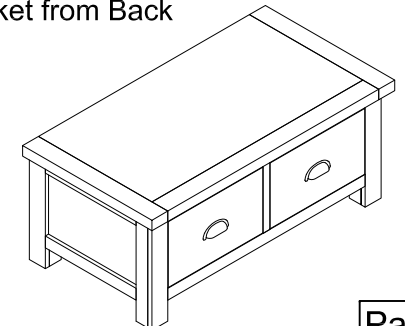


H- Base x1

STEP 1


NOTE:
Turn screws in a clockwise motion
to secure the hinges in place

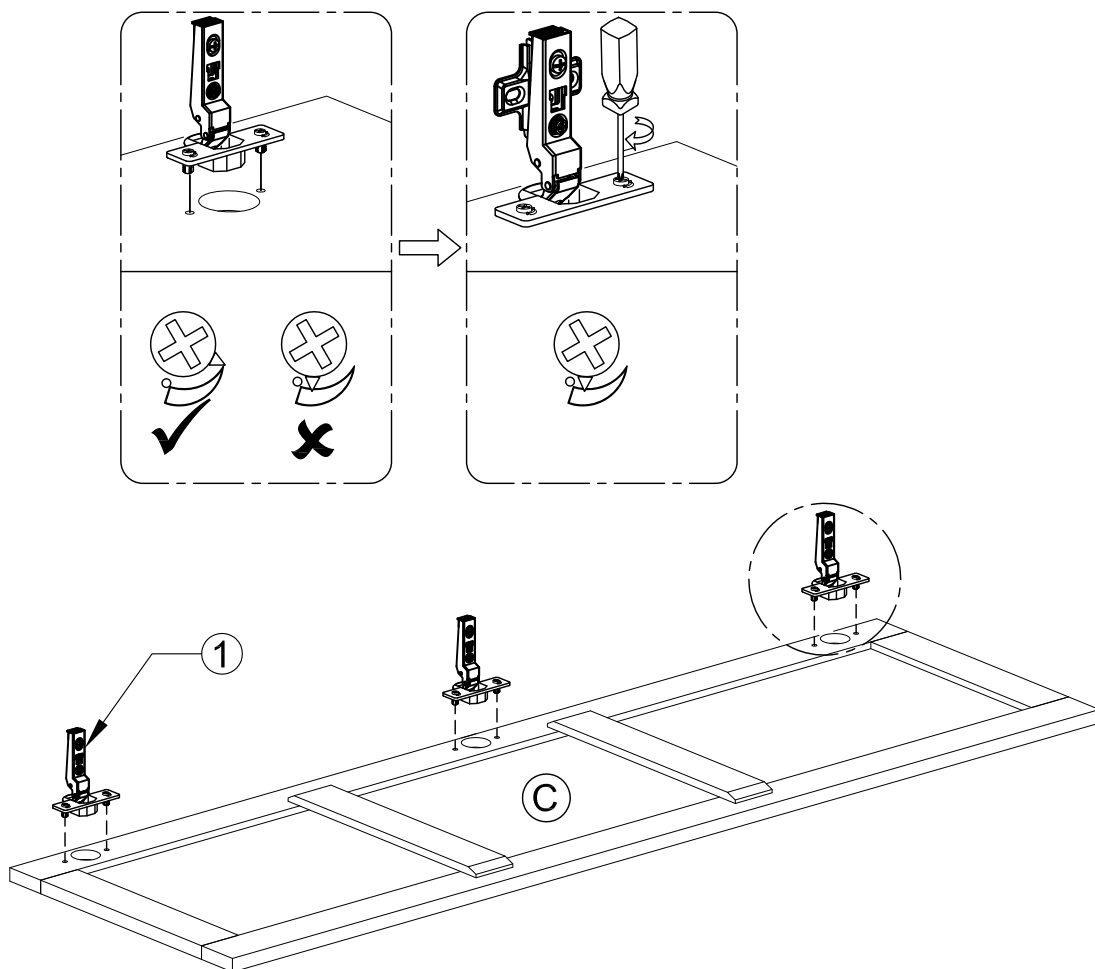


STEP 2

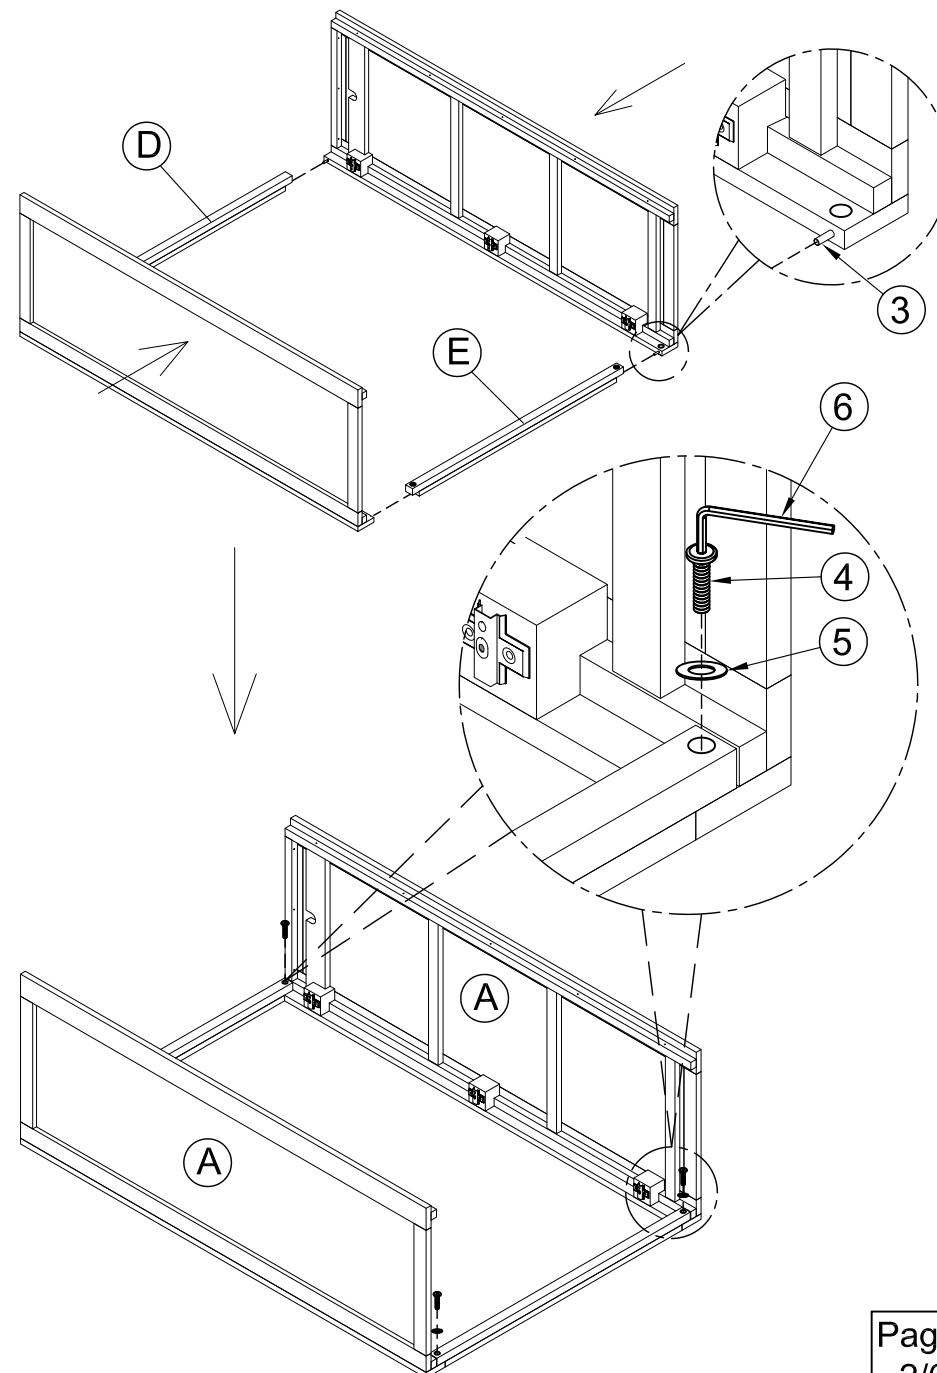


STEP 3

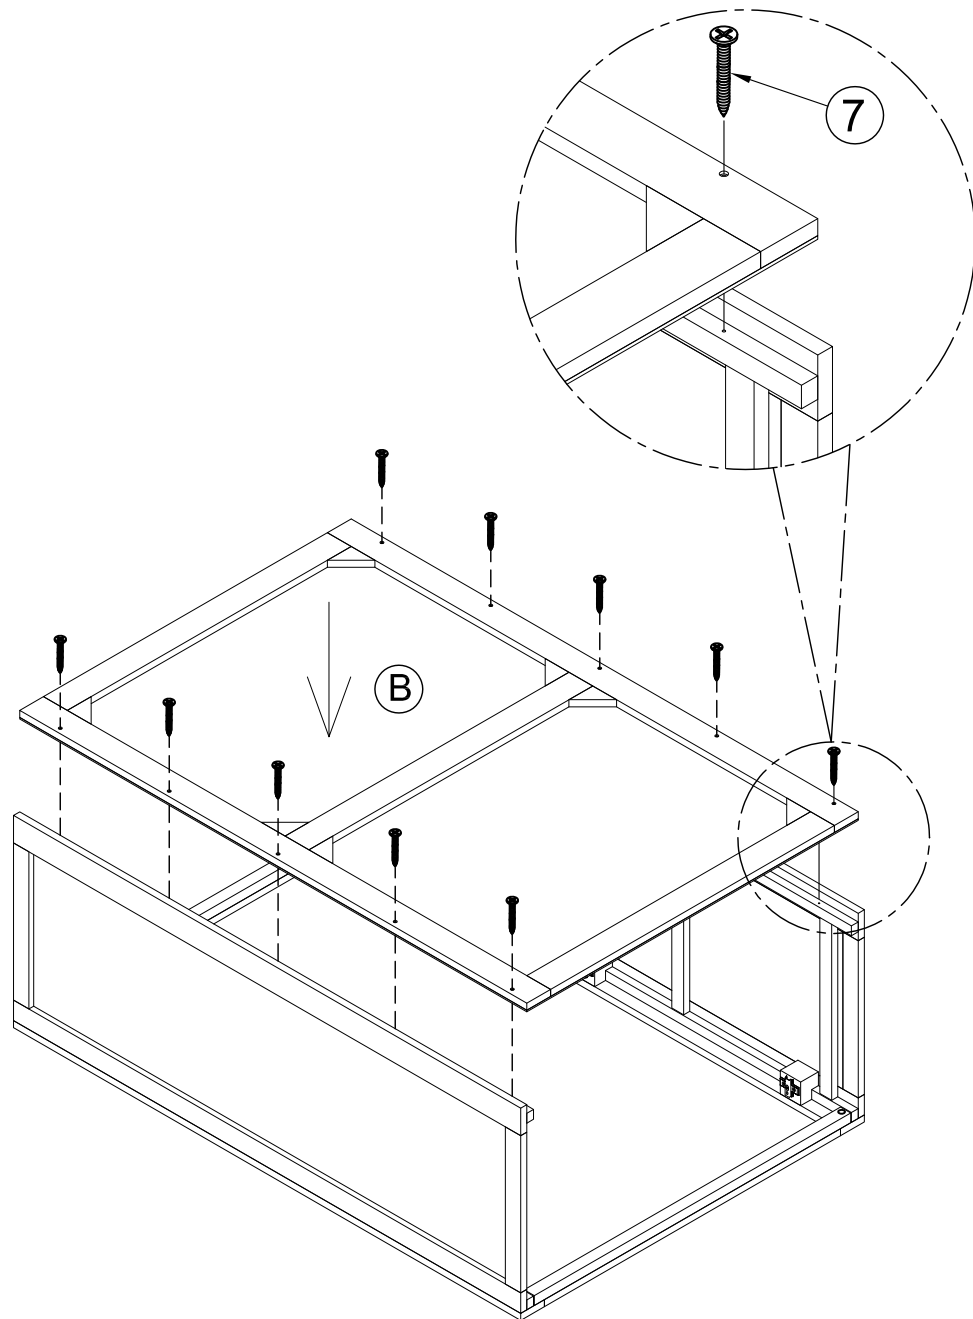


STEP 4

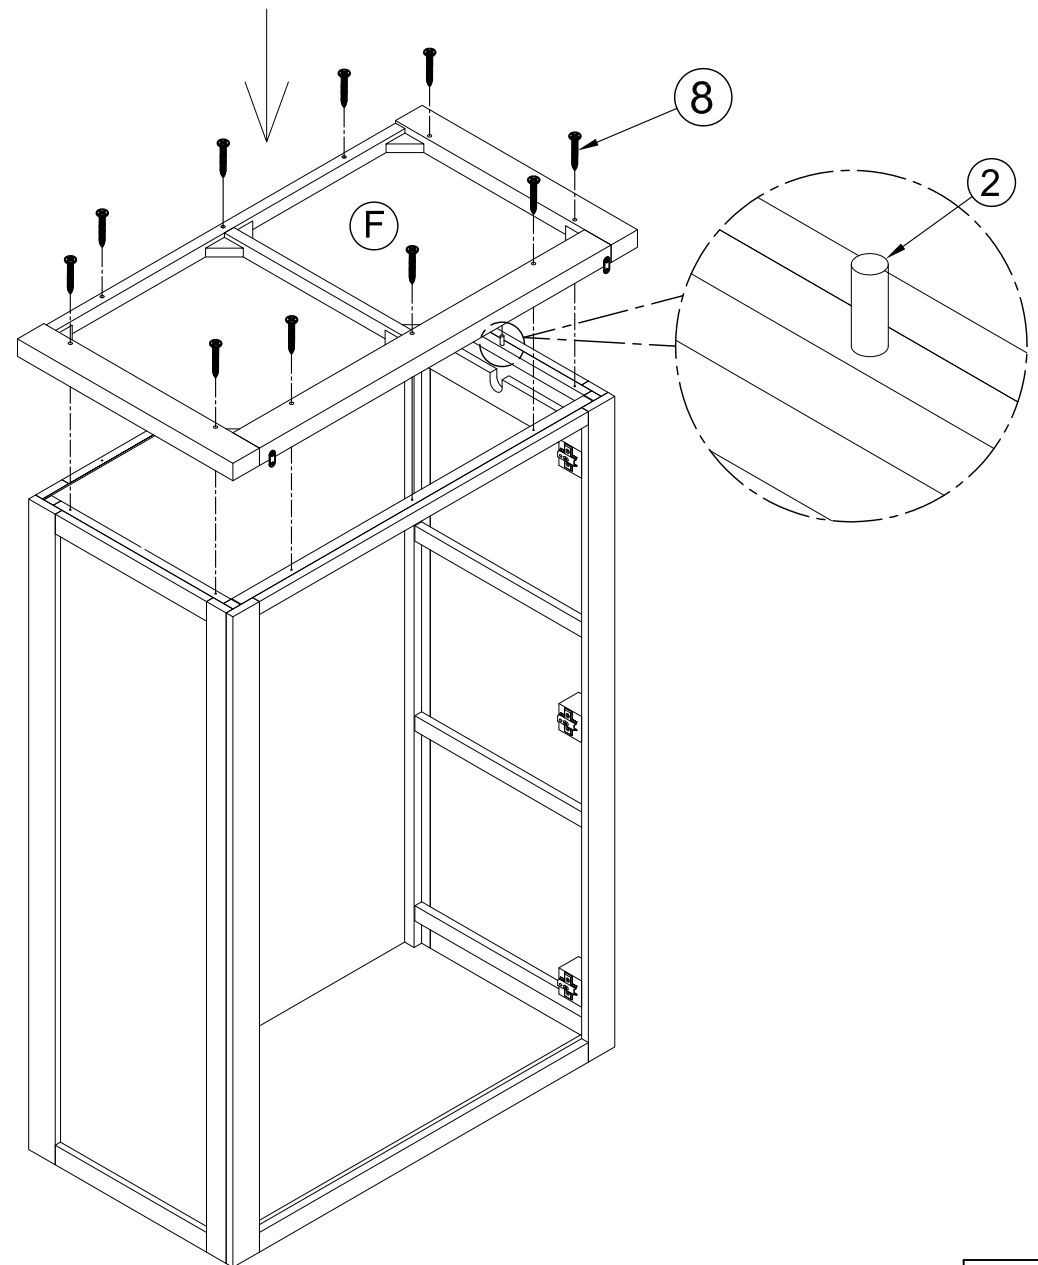


STEP 5

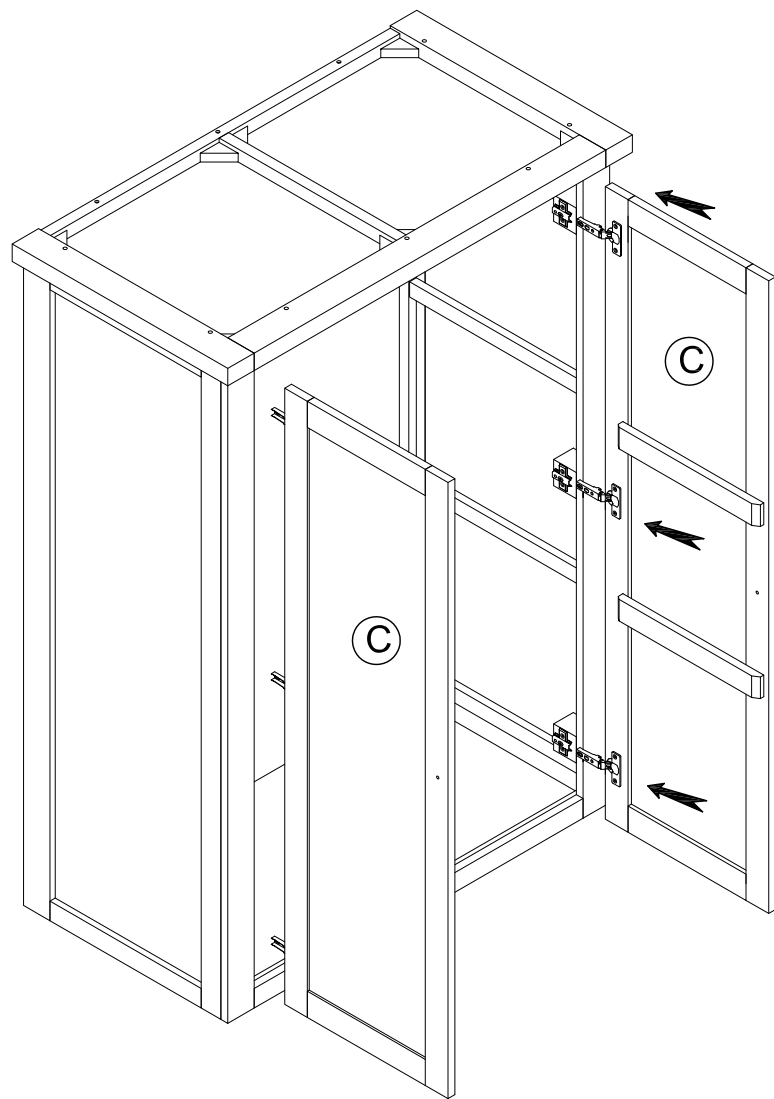


STEP 6

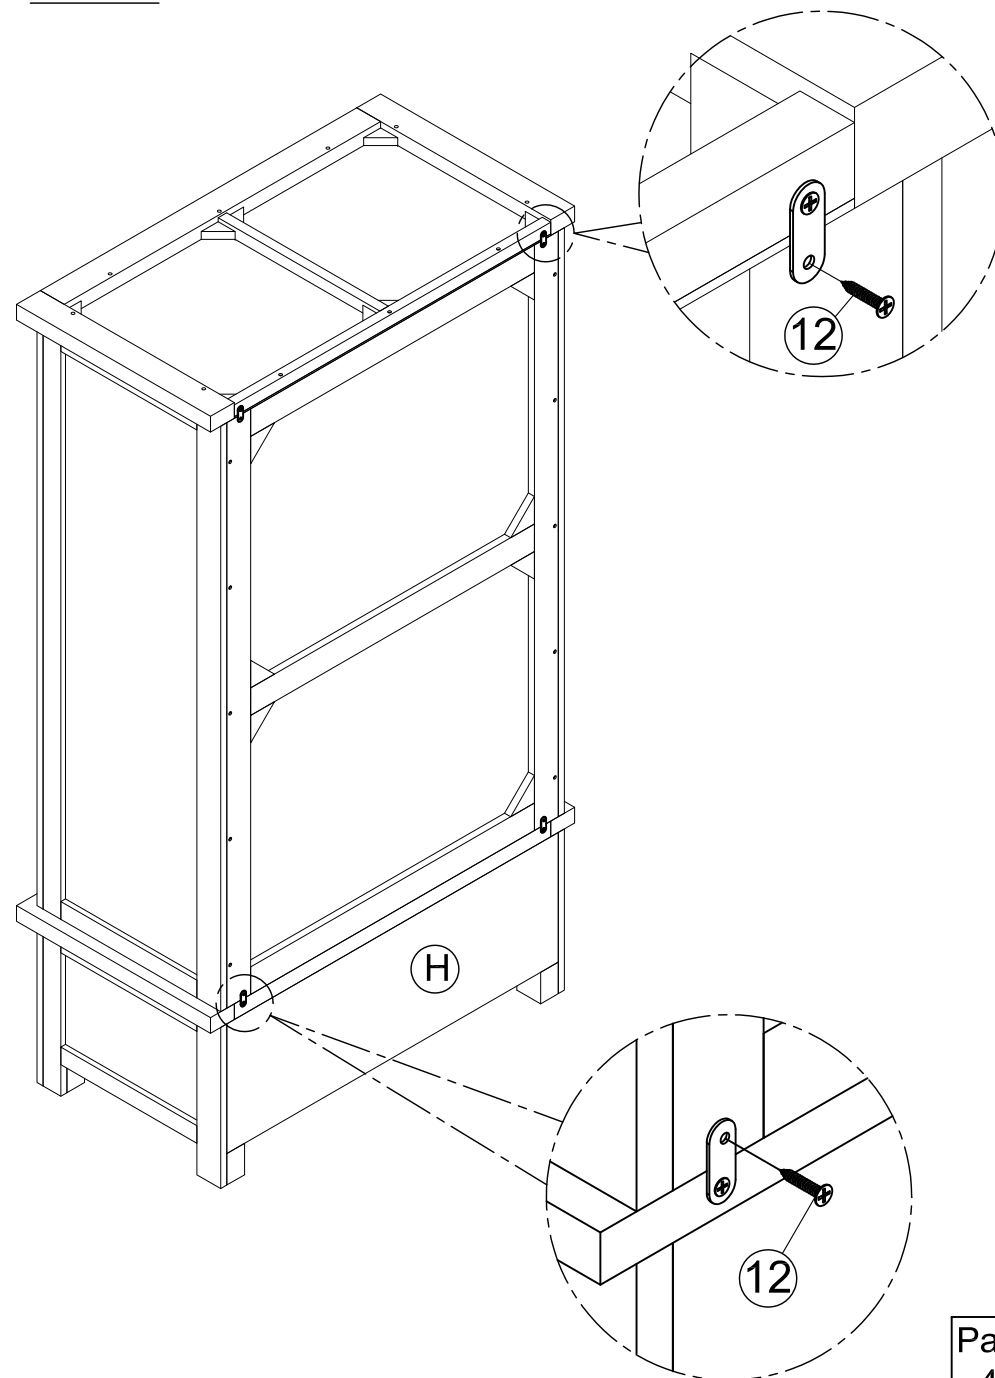

STEP 6

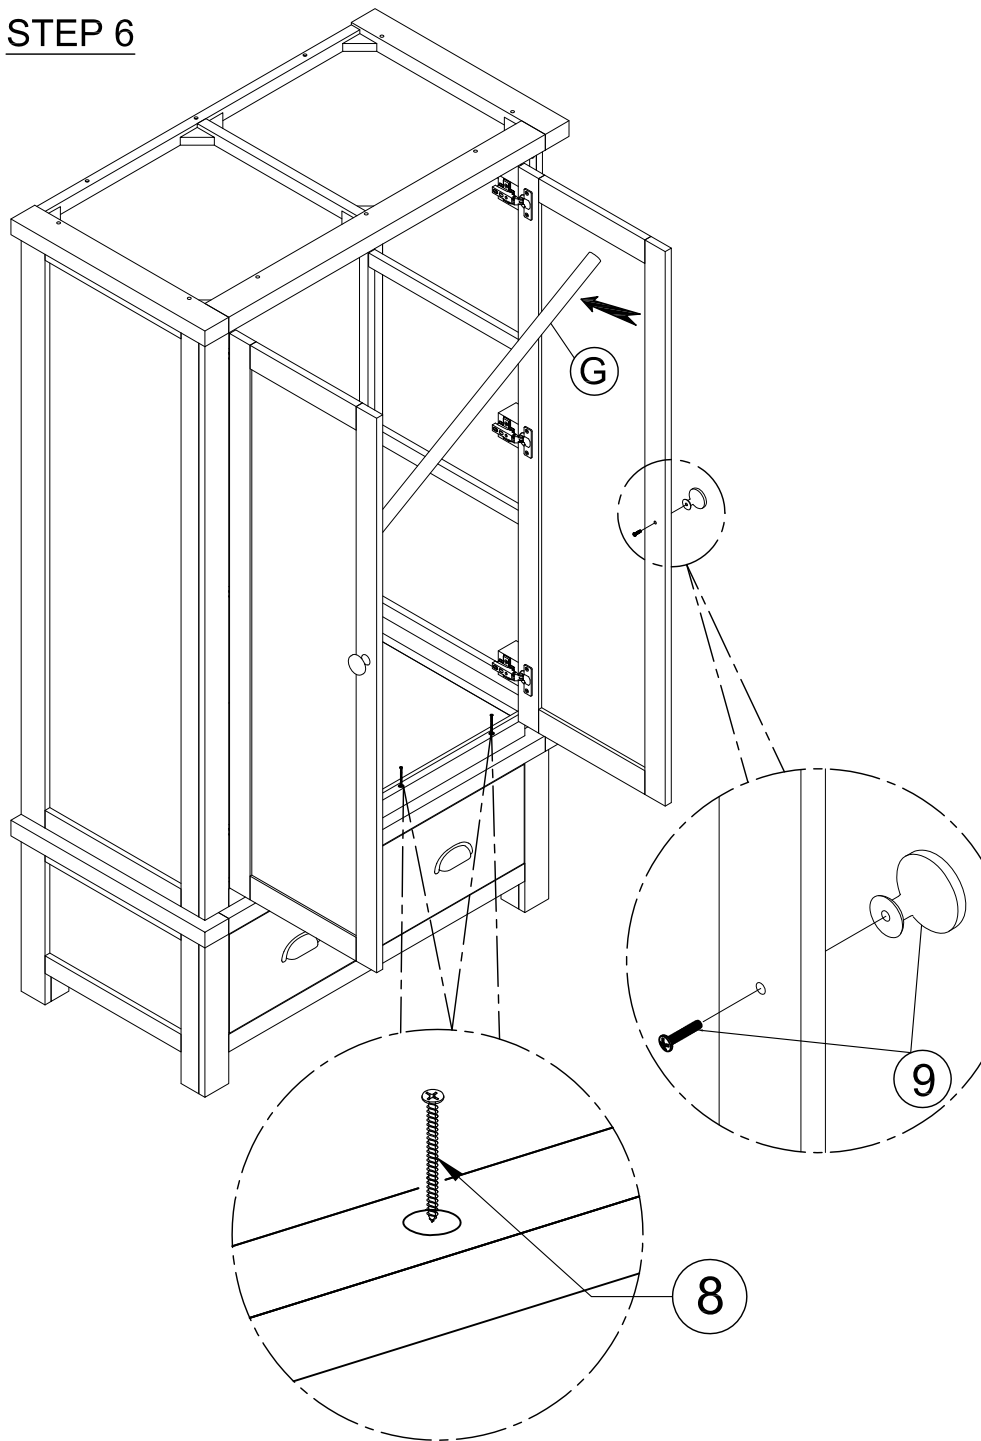


FINAL

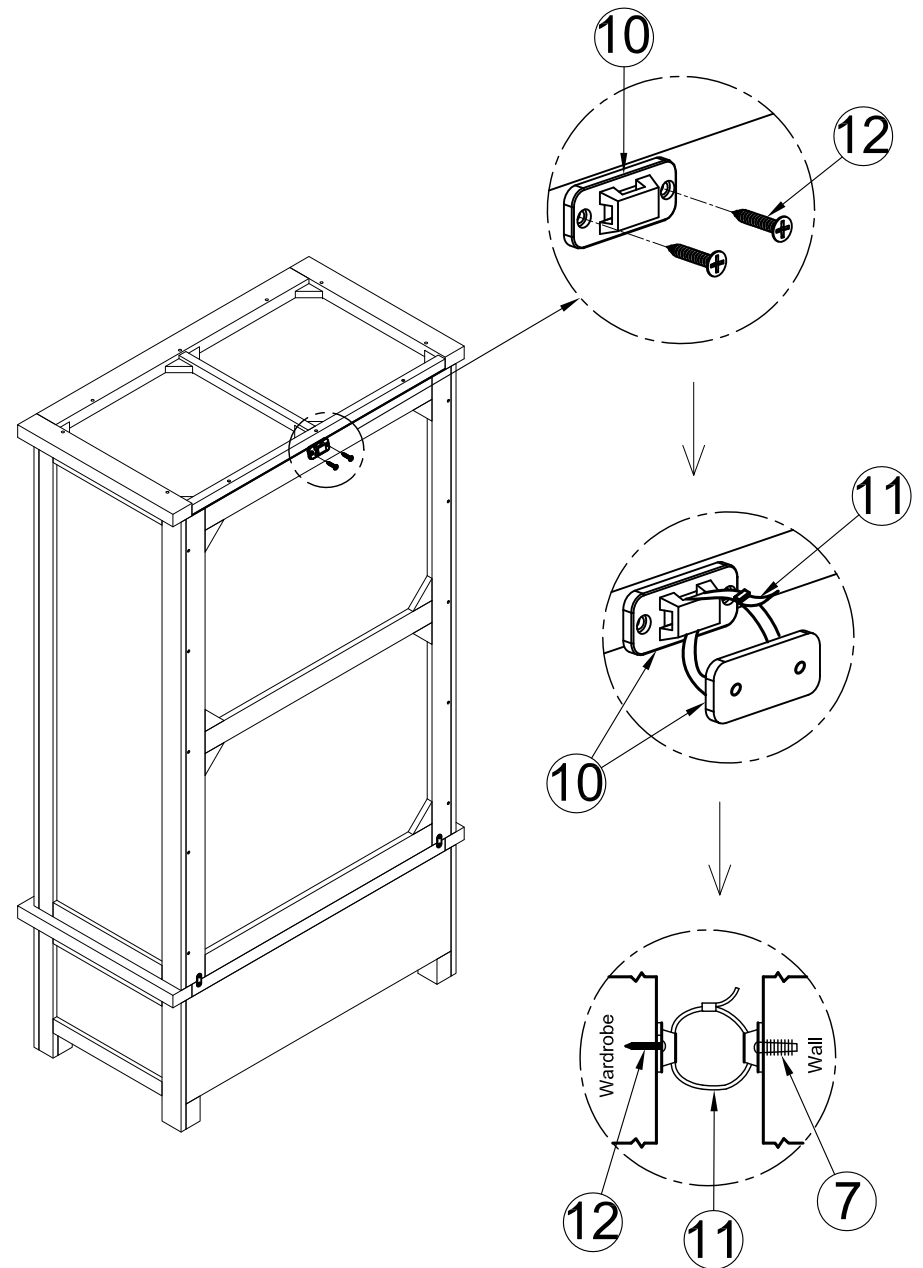

HINGE ADJUSTMENT INSTRUCTIONS


LATERAL ADJUSTMENT

by screw adjustment.

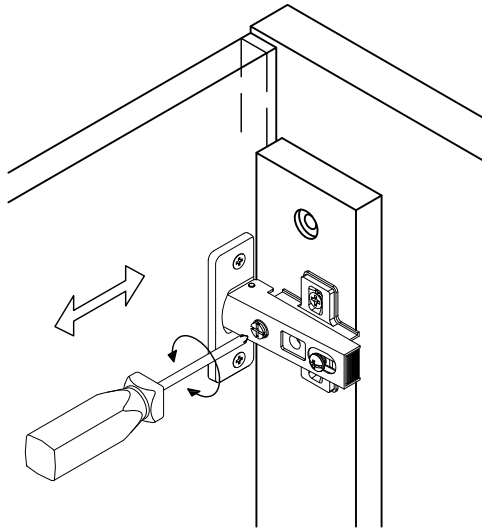


FRONT-TO-BACK

by slackening and retightening the hinge-arm mounting screw.

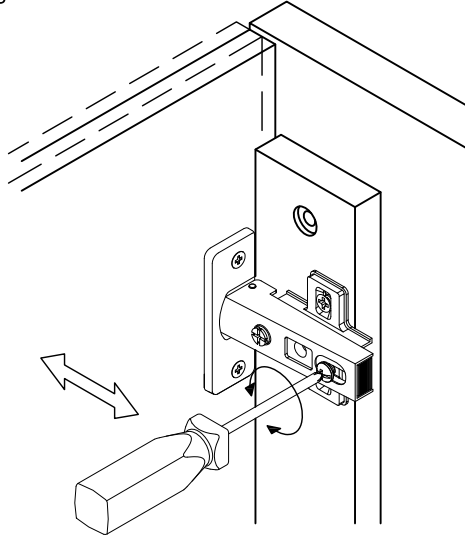


VERTICAL ADJUSTMENT

via slots on mounting plate by slackening and retightening the screws on mounting plate

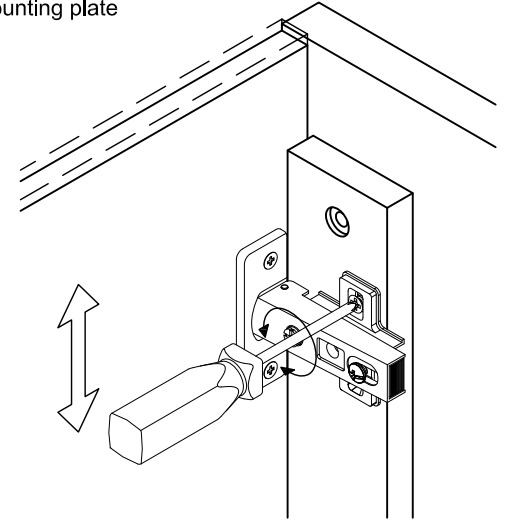

ASSEMBLY

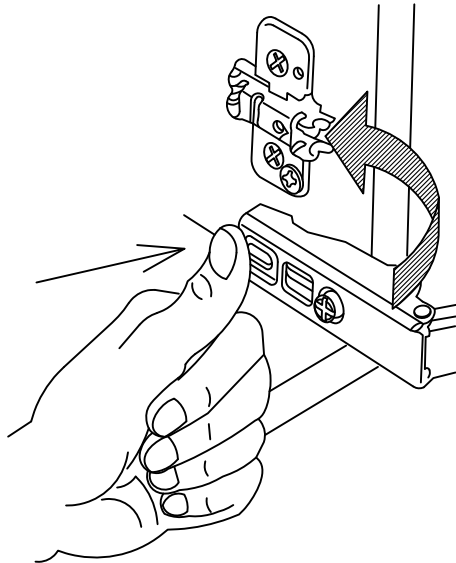

DISASSEMBLY

