



Assembly Instructions

Lily Relax Seat

Code: 00452



(W x D x H) 0.72m x 0.92m x 0.92m

This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

PLEASE KEEP THESE INSTRUCTIONS


Lily Relax Seat Assembly Instructions

Requires 2 person assembly

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver,
4mm Hex (Allen) Key, Mallet. 3mm Drill Bit required in order for you to drill

Lily Relax Seat Pack List		
Item	Description	Quantity
A	Back Support Assembly	1
B	Seat Assembly	1
C	Back Assembly	1
D1/D2	Armrest/Leg Assembly	2

Fixings	Quantity
50mm Screws	8
Hex Bolts	6
'T' Nuts	6

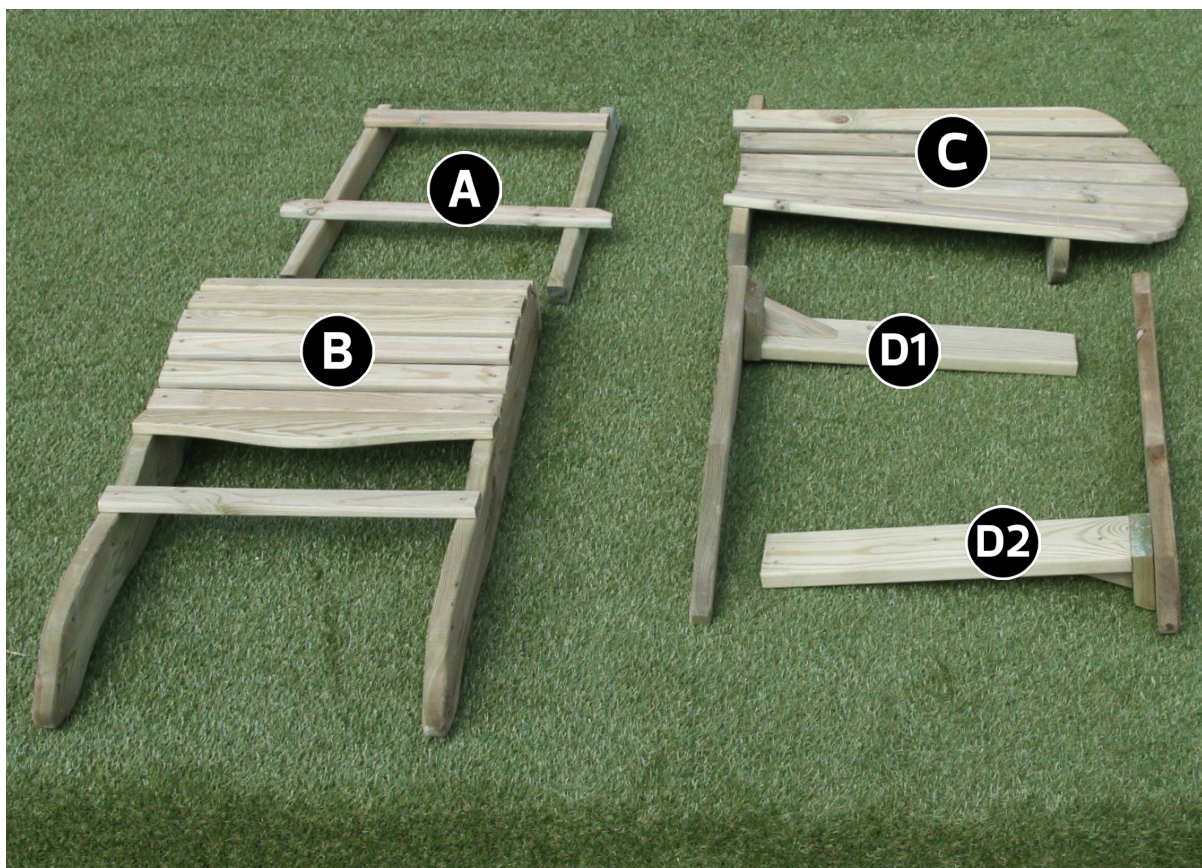

Requires 2 person assembly

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver,
4mm Hex (Allen) Key, Mallet. 3mm Drill Bit required in order for you to drill

1. Insert Back Assembly A between rear legs of Seat Assembly B, align bolt holes and insert 2no Hex Bolts and 'T' Nuts. See Figs. 1a, 1b & 1c.

Do not fully tighten at this stage.

2. Locate Back Assembly C as shown in Fig 2a and fix in position using 6no Screws. See Figs 2b & 2c.
3. Position Armrest/Leg Assembly D1 as shown in Fig.3a. Align bolt holes and insert 2no Hex Bolts and 'T' Nuts. See Fig. 3b. Do not fully tighten.

Attach Armrest/Leg Assembly D1 to Back Support Assembly A using 1no Screw. See Fig.3c.

Repeat procedure for Armrest/Leg Assembly D2.


Fully tighten all bolts at this stage.

Lily Relax Seat is now complete.


Requires 2 person assembly

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit,
4mm Hex (Allen) Key, Mallet.

1a

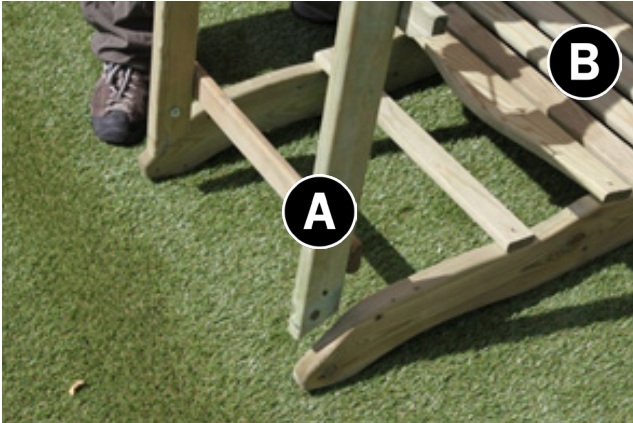


1b

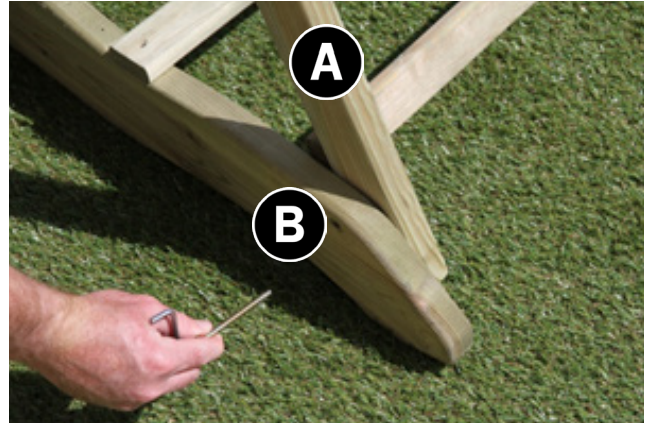


1c




2a

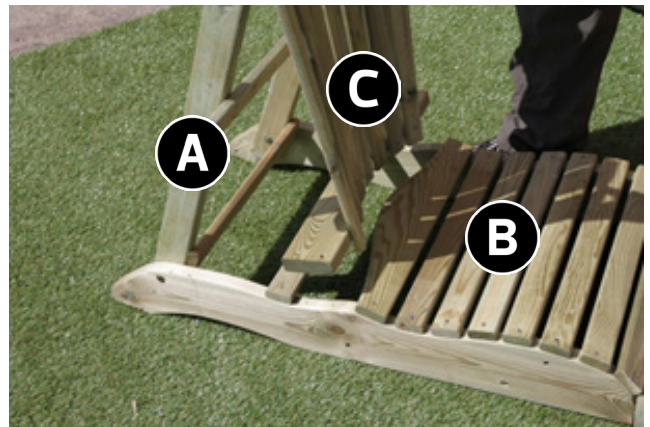

2b

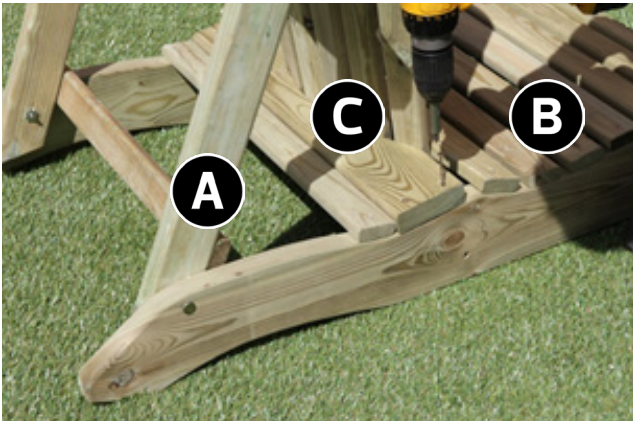

2c

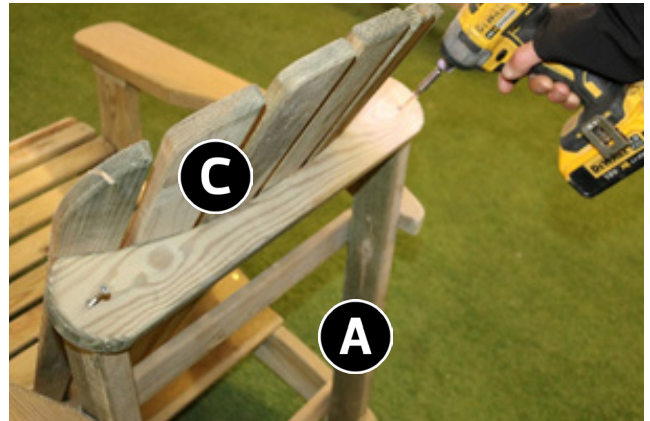

Please take a few moments to check all pack contents listed

Requires 2 person assembly

Tool required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, (Hex Bit Included)