



Assembly Instructions

Venus Arch

Code: 00039



(W x D x H): 1.80m x 1.06m x 2.13m

This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

PLEASE KEEP THESE INSTRUCTIONS

Product Name Assembly Instructions

Requires 2 person assembly.

Please take a few moments to check all pack contents listed.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Tape measure / Screwdriver, 3mm


Drill Bit required in order for you to drill all screw holes before construction.

The colour version of this document can be downloaded from:

www.zest4leisure.co.uk/downloads/category/C1

Product Name Pack List		
Item	Description	Quantity
A	Rafter	5
B	Rail	2
C	Trellis Panel	2
D	Post	4
E	Brace	4

Fixings	Quantity
60mm Screws	12
80mm Screws	26

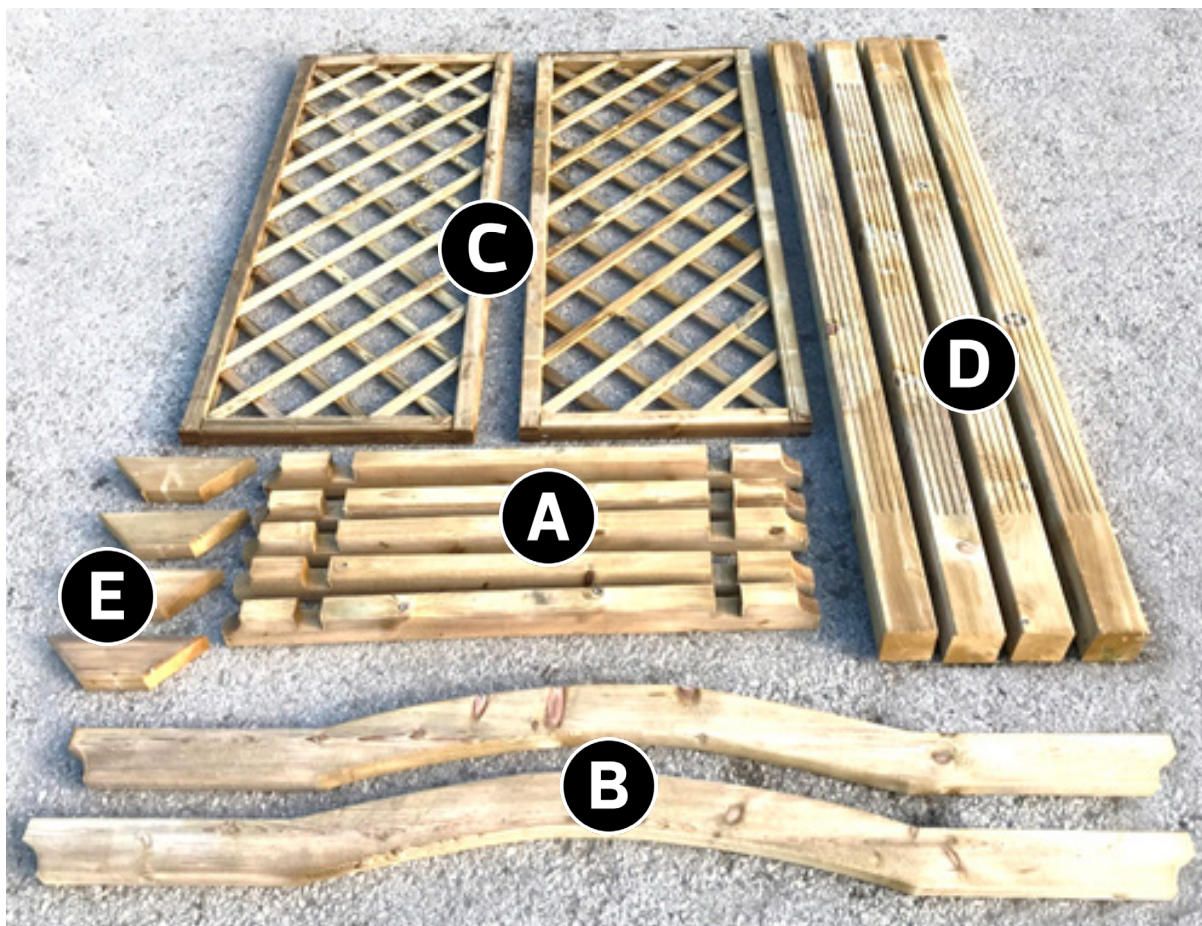

Requires 2 person assembly.

Please take a few moments to check all pack contents listed.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Tape measure / Screwdriver, 3mm

Drill Bit required in order for you to drill all screw holes before construction.

The colour version of this document can be downloaded from: www.zest4leisure.co.uk/downloads/category/C1

1. Position 2 no rafters A, one at each end of rail B, and fix using 4 no 80mm screws. (Fig 1a) Position 2 further rafters A on rail B, 230 mm in from the first 2 rafters, and fix with 4 no 80 mm screws. (Fig 1b) Finally, position the remaining rafter A centrally on rail B, and fix using 4 no 80mm screws (Fig 1c)
2. Position 1no Trellis Panel C between 2no Posts D ensuring trellis is 300mm from top of post and notches are outer facing. Fix using 6no 60mm screws – 3no per post (Fig. 2). Repeat procedure with remaining Trellis Panel C and Posts D.
3. Locate Rafters A onto Post/Trellis Assemblies and fix in position using 8no 80mm Screws – 2no per post (Fig.3).
4. Attach Braces D as shown in Fig.4 using 8no 80mm Screws – 2no per Brace D.

Requires 2 person assembly.


Please take a few moments to check all pack contents listed.

Tools required: Coded / Cordless Drill, Pozi-drive Bit / Tape measure / Screwdriver, 3mm


Drill Bit required in order for you to drill all screw holes before construction.

The colour version of this document can be downloaded from: www.zest4leisure.co.uk/downloads/category/C1


1a

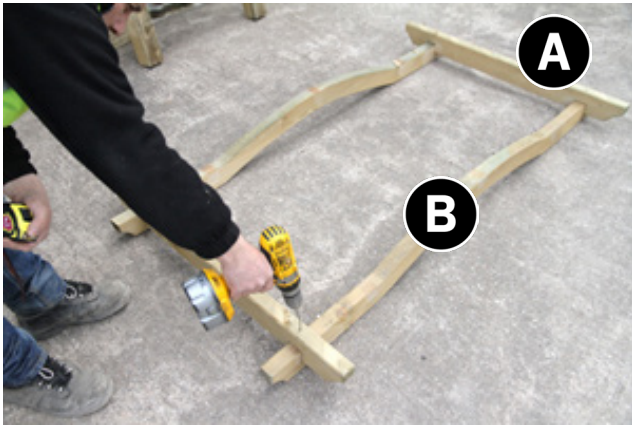


1b

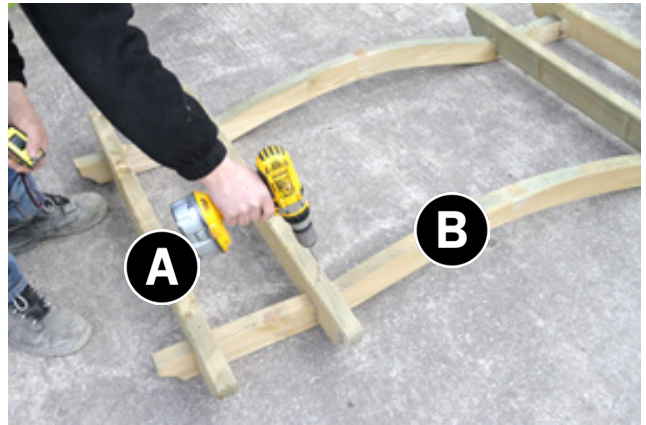


1c

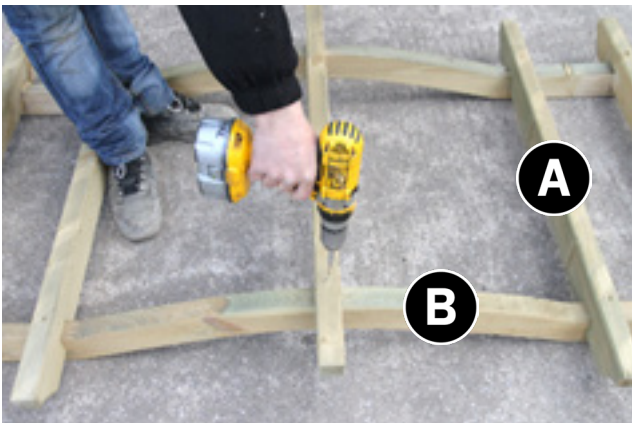

2

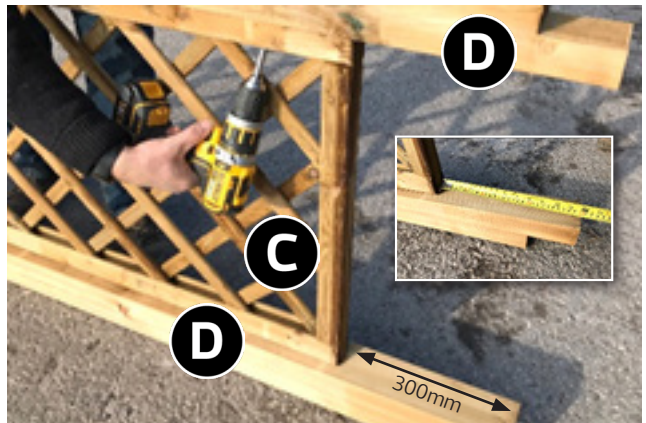

3

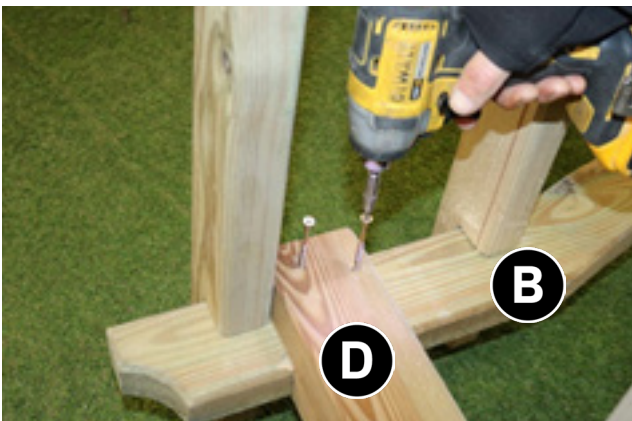

4

