



Assembly Instructions

Twilight Arch

Code: 00001



(W x D x H) 2.1m x 0.72m x 2.13m

This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

PLEASE KEEP THESE INSTRUCTIONS

Twilight Arch Assembly Instructions


Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, Tape Measure. 3mm

Drill Bit required in order for you to drill all screw holes before construction.

Product Name Pack List		
Item	Description	Quantity
A	Rail	2
B	Rafter	5
C	Post	4
D	Trellis Panel	2
E	Bracing	4

Fixings	Quantity
60mm Screws	34

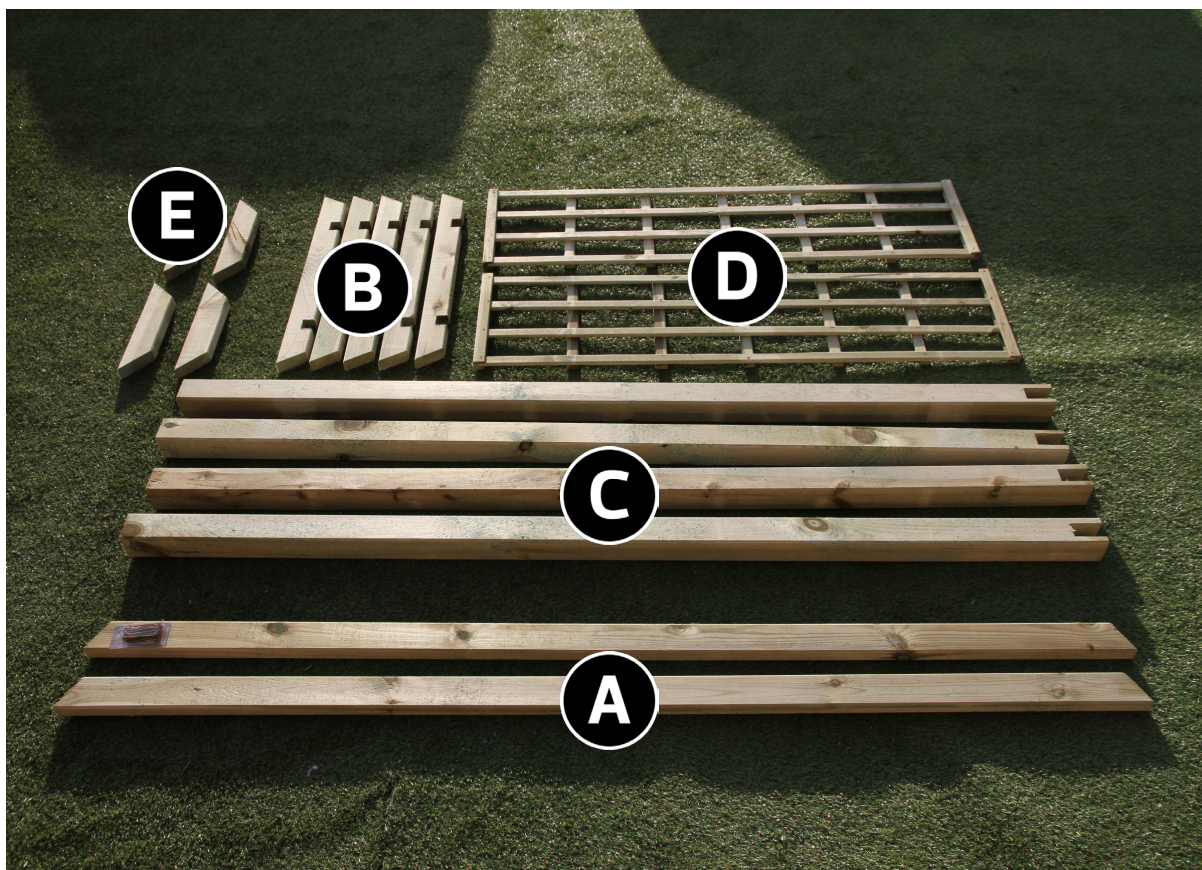

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure, 3mm

Drill Bit required in order for you to drill all screw holes before construction.

1. Position Rafters B 150mm from edge at both ends of Arches A and fix using 4no 60mm Screws – 2 per Rafter (Fig.1a). Space out remaining Rafters B evenly (Fig.1b) and attach using 6no 60mm Screws.
2. Locate Post C onto Arch A as shown in Fig.2a (adjust width to suit). Fix in position using 2no 60mm Screws (Fig.2b).
3. Place Trellis Panel D 400mm from base of Post C and fix in position using 2no 60mm Screws (Figs.3a & 3b).
4. Position second Post C as shown in Fig.4a and fix to Arch A using 2no 60mm Screws.

Fix Trellis Panel D to second Post C using 2no 60mm Screws (Figs.4b & 4c).

Repeat stages 1–4 for remaining Posts & Trellis Panel on opposite side of arch.

5. Ensuring Post C is perpendicular to Rail A, place Bracing E as shown in Fig.5 and fix in position using 2no 60mm Screws.


Repeat procedure for remaining bracings.

Please take a few moments to check all pack contents listed.


Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure, 3mm Drill Bit required in order for you to drill all screw holes before construction.


1a

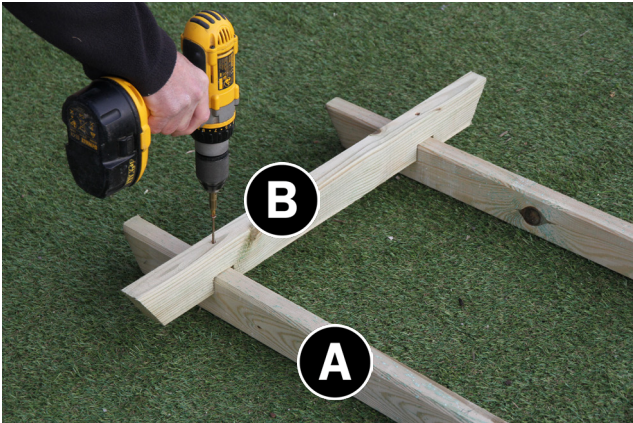


1b

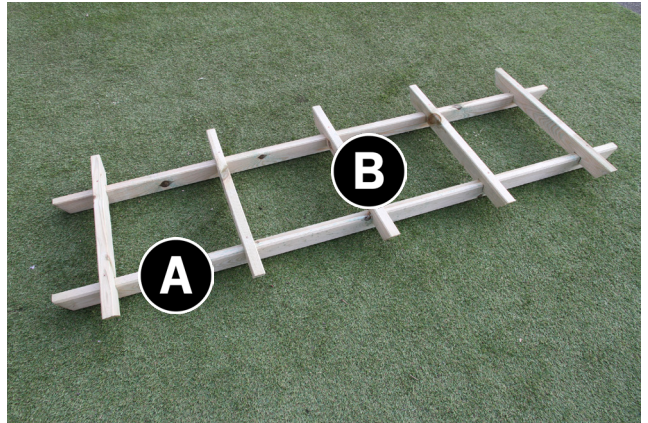


2a

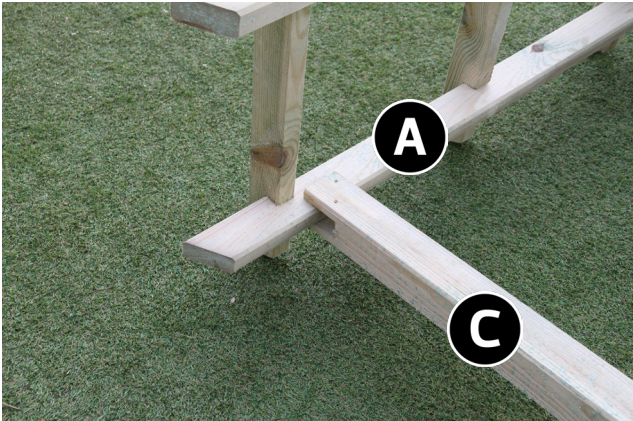


2b

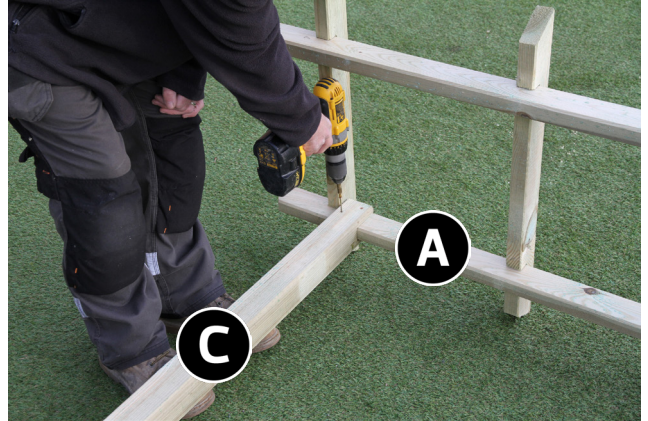

3a

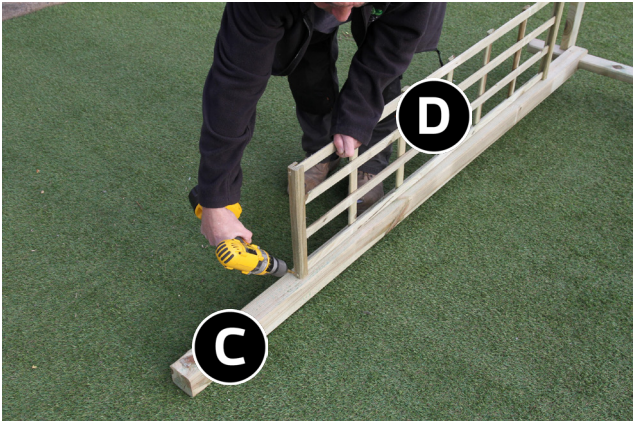


3b

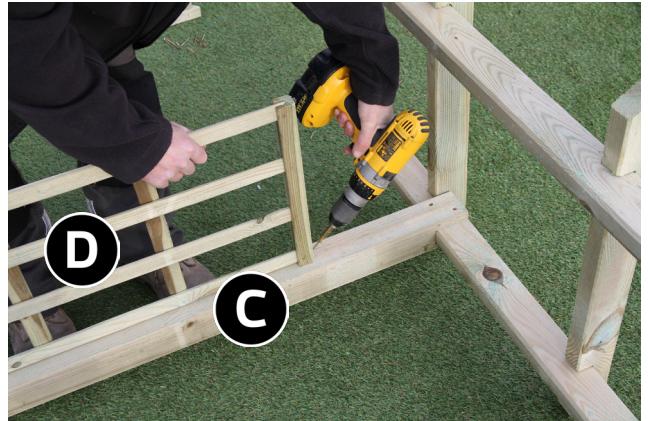

4a



4b

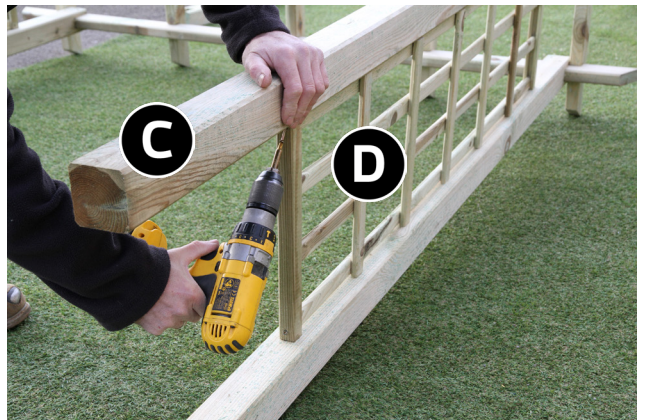


Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure, 3mm Drill Bit required in order for you to drill all screw holes before construction.

4c

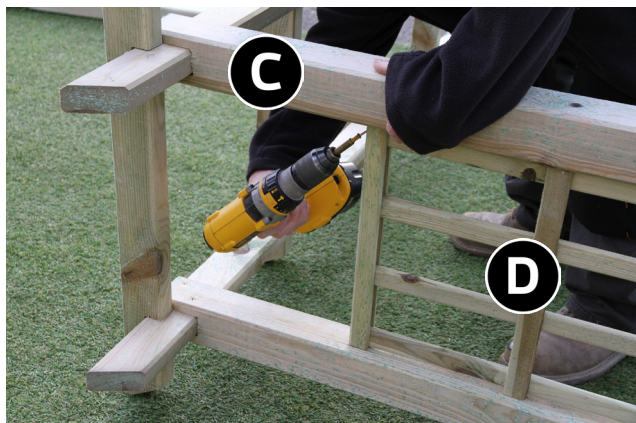

5

