

Assembly Instructions LADDER PLANTER

Code: 25221



 $(W \times D \times H) 0.79m \times 0.61m \times 1.38m$



Online assembly video available Please scan the QR code or visit zest4leisuresupport.co.uk



PLEASE KEEP THESE INSTRUCTIONS



Timber Characteristics...

Natural & Unique, our timber's story



A guide to understanding the natural characteristics of timber and what to do if you feel there is an issue...

Timber is a unique and naturally beautiful material with its own characteristics which makes each piece distinctive.

At Zest we are committed to the environment and we are very proud to be a Forest Stewardship® Certified company. (FSC® C114990) and all timber used has been ethically sourced from responsibly managed forests.

Splits & cracks are to be expected in timber and they naturally appear in the grain due to changing temperatures and humidity levels. They are not a cause for concern as they will not affect the strength or durability of the product.



Normal splits are characteristics of timber.



Use the "2p Coin Test" as a guide.



Knots are characteristics of timber.



If you find a dead-knot email your retailer including a photo.

Knots are a natural characteristic of timber however a dead knot may be an issue which can be reported in writing to your retailer and must include photographic evidence to support the query.



If a particular split or crack becomes visible and is of concern simply use the "2p Coin Test" as a guide. There is no need for concern if the coin will not fit. If the coin does fit in the split, potentially there may be an issue. In this case, in order for customer services to investigate the matter fully, it should be reported in writing to your retailer, along with a clear photograph showing the 2p coin in place.

"Here at Zest we take any complaint very seriously and each one is investigated individually and judged specifically using established guidelines to determine if it is a justified complaint and whether a replacement part is required. "Customer Service Dept.

Sun Bleaching
(from packaging)
& Green Spotting
(Caused by pressure treatment) are not causes for concern and they will fade over time when items are placed outdoors.

Neither will affect the durability of the product.





Sun-bleaching & Pressure Treatment green spotting will fade in time.

IMPORTANT INFORMATION regarding further treatment: Pressure Treated products should not have any further treatment applied for the first 6 months



Product Assembly Instructions

Requires 2 Person assembly


Tools required: Corded / cordless drill, 3mm Drill bit, Pozi– drive bit / Screwdriver.

(All screw holes to be pre–drilled)


Please take a few moments to check all pack contents listed


Product Name Pack List			
Item	Description	Quantity	
А	TROUGH	4	
B1 & B2	SIDERAILS	2	

Fixings	Quantity
20mm Screw	4
40mm Screw	
60mm Screw	
'L' Bracket	2

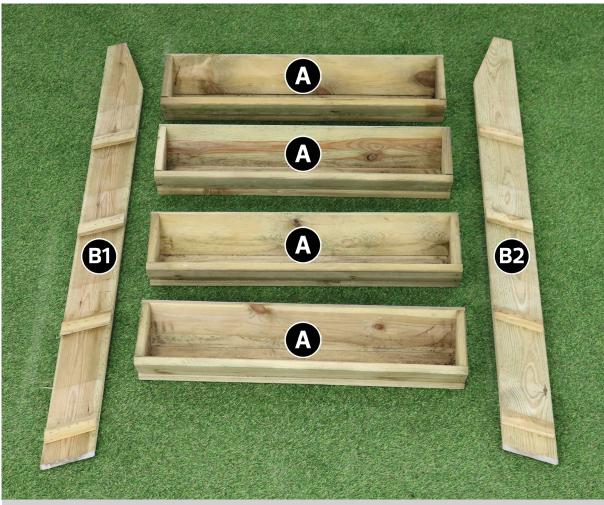

This product is made from pressure–treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

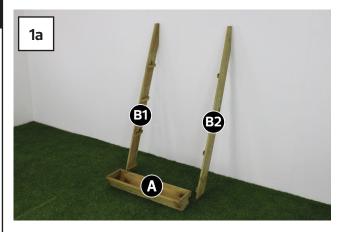

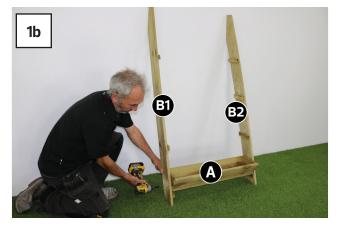

Set out Side Rails B1 & B2 as shown in Fig. 1a. Place 1x Trough (A) onto lowest battens making the trough flush with the back of the side rail and fix using 4x 60mm screws (2x 60mm screws at each end, pre drilling them first).


Note: Ensure screws are located into base board of Trough (A)

2



Place second Trough (A) onto subsequent battens and fix as described in instruction 1.


3

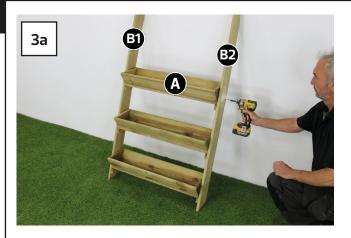



Set out Side Rails B1 & B2 as shown in Fig. 1a. Place 1x Trough (A) onto lowest battens making the trough flush with the back of the side rail and fix using 4x 60mm screws (2x 60mm screws at each end, pre drilling them first).

Note: Ensure screws are located into base board of Trough (A)

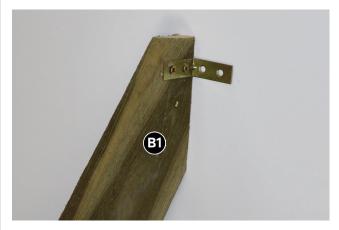

Should you wish to secure this to a wall or post, you can use the L bracket supplied as shown.

5



The Ladder Planter is now complete